



Beocord

3300

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Bang & Olufsen

  Beosystem 3300

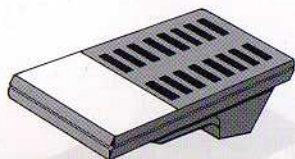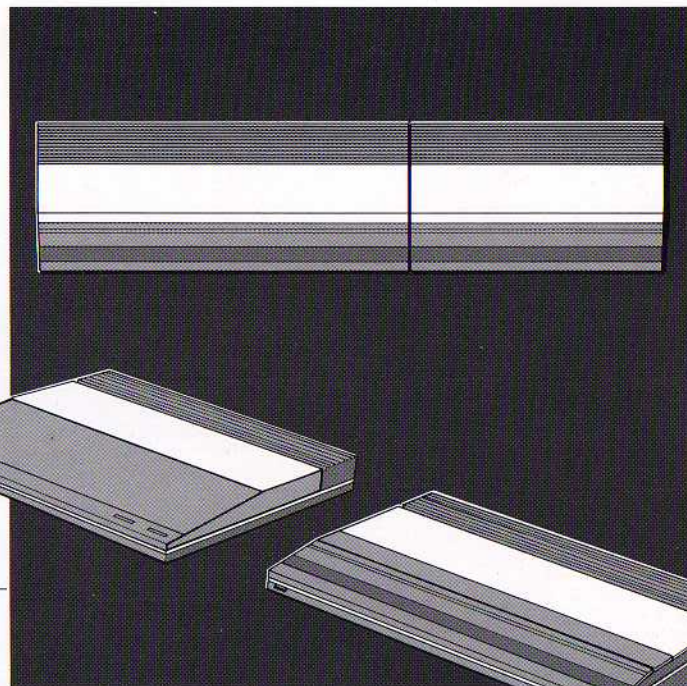

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

 
The Beocord 3300 is the tape recorder designed for the Beosystem 3300. The other units in the Beosystem 3300 are:

- the Beomaster 3300 tuner/amplifier*
- the Terminal 3300 remote control*
- the Beogram CD 3300 compact disc player*
- the Beogram 3300 record player*

The sloping sensi-touch panel on the front gives access to all the primary functions. All you have to do is touch the area below the appropriate text or symbol.

The cassette compartment is under the hinged aluminium lid, where you will also find the secondary functions. To open the lid press the extreme left-hand side of the narrow front strip. Close the lid again by pressing it down gently until you hear a 'click'.

If connected to the Beomaster 3300, the Beocord 3300 can be remote controlled using the Terminal 3300. For details about remote control, please refer to the Beomaster 3300 manual.

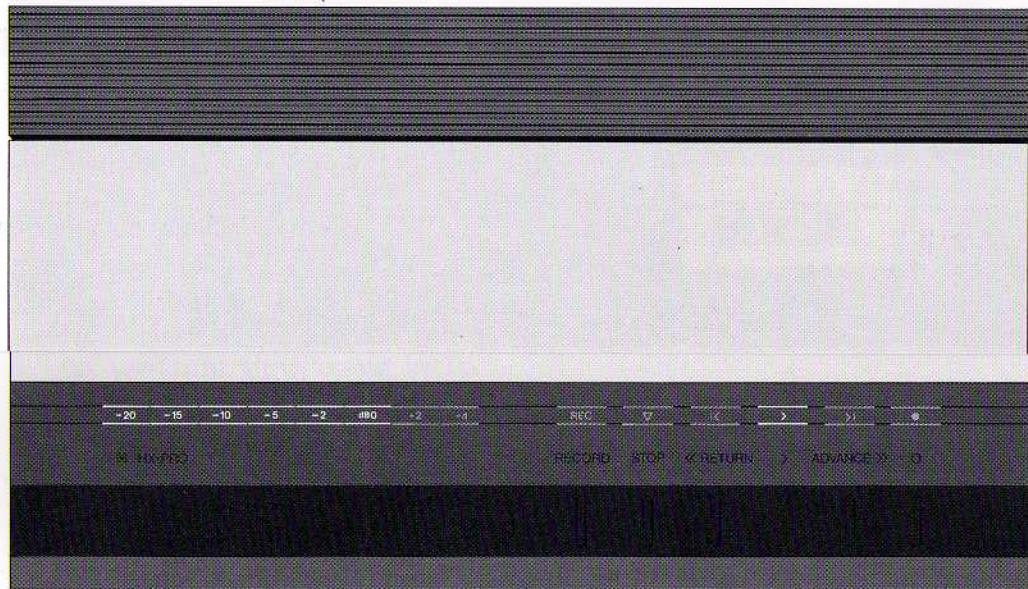

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Setting up, 4

Loading and unloading cassettes, 5

Playing back, 6

 
Searching, rewinding and winding, 7

Recording, 8

Maintenance, 9

Technical specifications, 10

**This manual was scanned by
and available FREE at www.Iconic-AV.co.uk**

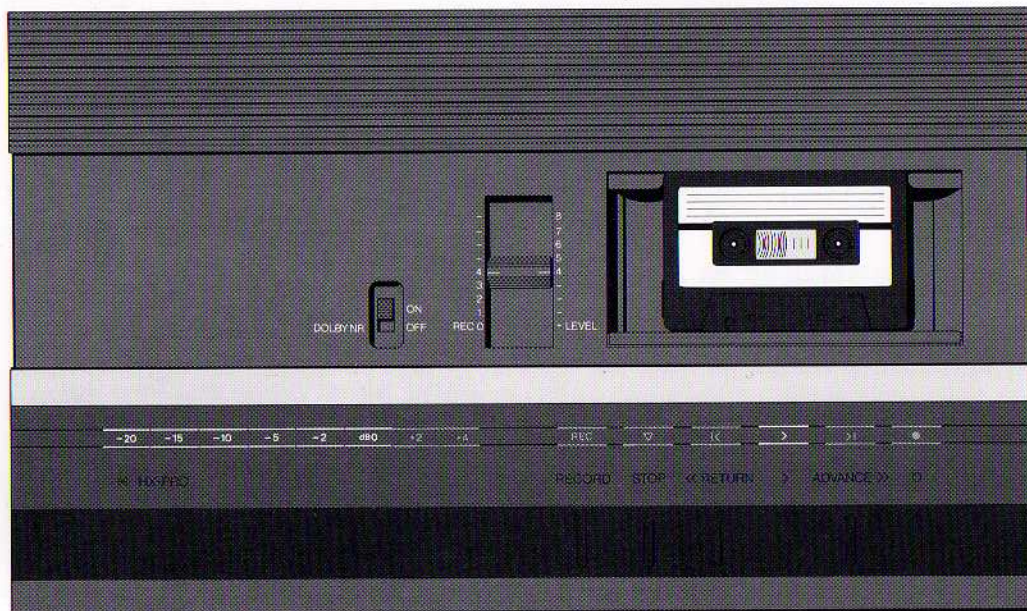

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

How to use this manual

- This manual explains how to set up and operate the **Beocord 3300** tape recorder.
- The instructions refer to the sensi-touch operation panel. Each control referred to is indicated by a small box with the appropriate text symbol inside it.

For the UK market only

IMPORTANT

The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter **N** or coloured **black**.

The wire which is coloured brown must be connected to the terminal which is marked with the letter **L** or coloured **red**.

Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Table of contents

Setting up	4
Where to put the tape recorder	4
Connection to the Beomaster	4
Stand-by mode	4
Loading and unloading cassettes	5
Playing back	6
Starting and stopping playback	6
Repeating a tape	6
Searching, rewinding and winding	7
Recording	8
Maintenance	9
Tape deck	9
Surfaces	9
Technical specifications	10

Setting up

Where to put the tape recorder

The tape recorder must be placed on a stable surface. Avoid placing it in direct sunlight or near radiators or other sources of heat. Make

sure to put it in a place where ventilation cannot be impeded.

Connection to the Beomaster



Connect the tape recorder to the Beomaster 3300 using the cable with 7 pin DIN plugs attached to the tape recorder. Plug the cable into the TP socket on the Beomaster.

Stand-by mode

Once connected to the mains supply, the tape recorder is in stand-by mode and ready to be operated. The stand-by mode is indicated by a red light on the right-hand side of the operation panel.

The tape recorder is designed to be left in stand-by mode when not in use.

