

## Contents

- 3 Removing the transport screws
- 3 Placement
- 4 Connections
- 6 Maintenance

 
## Removing the transport screws

The Beocenter is provided with two screws on the base which protect the compact disc unit suspension during transport.

These screws must be loosened before you can operate it.

To gain access to the screws, carefully turn the Beocenter upside down. Remove the two screws with a screw-driver and place them in the two holes marked PLAY for safekeeping.

*If you ever have to transport the Beocenter, we strongly recommend that you reinsert the transport screws in the holes marked TRANSPORT.*

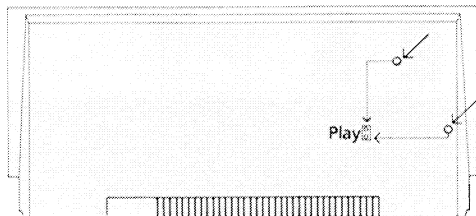

## Placement

The Beocenter must be placed on a firm, horizontal surface.

Do not obstruct the ventilation apertures in any way. Avoid placing it in direct sunlight, near radiators or other sources of heat.

 
## Connections

Connect loudspeakers, antennae, and the other units in the Beosystem (if any) to the Beocenter **before** connecting it to the mains supply.

To gain access to the sockets, lift up the hinged grille at the rear.


The loudspeakers can be connected in series to the Beocenter, as shown on the diagram, or one loudspeaker to either of the two sockets.

Please refer to the loudspeaker manual for further information.

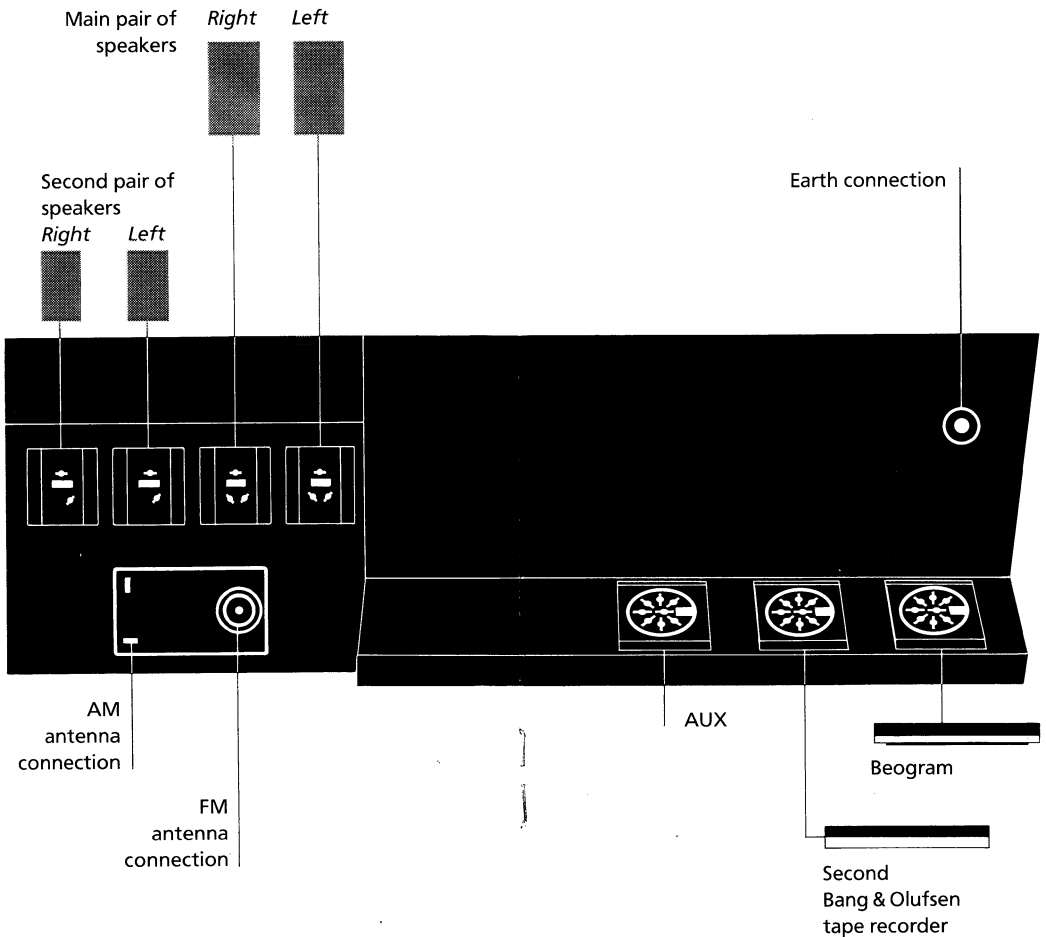

## Headphones

 The socket PHONES underneath the operation panel enables you to connect headphones.

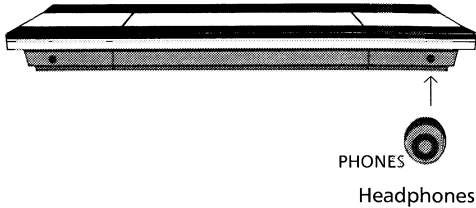

## Maintenance

 
### Surfaces

Use a soft, dry cloth to wipe off the Beocenter. Window cleaner on a dry cloth will do to remove any fingerprints and grease stains on the glass panels.

*Never use denatured alcohol to clean any part of the Beocenter.*

### Tape deck

The tape path, i.e. tape heads, pinch rollers and other parts which the tape touches during play or recording, should be cleaned every now and then to prevent dust and fluff building up on them.




Use a cotton bud dipped in a fluid designed specially for this purpose.

*The cleaning process must be carried out while the tape compartment is empty.*

## Caution

 *The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.*



*The black and yellow label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case of any trouble with the compact disc player, please contact your Bang & Olufsen dealer. The apparatus must be opened by qualified servicemen only.*

*The Beocenter fulfils the conditions stated in the EEC directive 82/499 concerning radio frequency interference.*

## International guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature

## Special note for the UK market

### IMPORTANT

*The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:*

*Blue: Neutral*

*Brown: Live*

*As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your unit, proceed as follows:*

*The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.*

*The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

*Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.*