

## Correction to the Guide

## Correction for page 18 in the guide

The easiest way to copy music into the CD memory is to copy the entire CD. Just load the CD and start copying. The duration of the copying depends on the length of the CD. The quality of the music in the CD memory corresponds to the quality of the original CD. The CD can be heard during copying but you can also choose to mute the speakers while copying.

Copy protected CDs can still be copied to the memory of your own music system. However, if the CD you have copied is copy protected, you must confirm that you wish to store the copy. Otherwise it is automatically deleted when the system switches to standby approximately 30 minutes after finishing the copying.

Copy protection information may be placed anywhere on the CD. Therefore, this information may appear at any time when you copy such a CD. When this information is detected by your music system, CODED CD appears in the display but the music system continues copying the CD.

If the memory group you choose is full when you want to copy a CD into it, the display reads FULL. You have to delete a CD before copying a new one into the group

### Copy and store an entire CD

Press to play the loaded CD	<b>CD</b>
Press to start copying the CD	<b>COPY</b>
The display indicates to copy all tracks	<b>ALL ?</b>
Press to copy the entire CD	<b>GO</b> <b>COPY TO ?</b>
Press to choose which group to store your CD in – green, yellow, red or blue	
The first available position in the chosen group is suggested, but you can choose another position	<b>17 ?</b>
Press to step between available positions, or...	<b>▲</b> <b>▼</b>
Key in the number of the position you want , or...	<b>0 – 9</b>
Press to start copying	<b>GO</b> <b>COPYING</b>
If the CD is copy protected, the display will indicate this shortly	<b>CODED CD</b>
When the copying of a coded CD is complete, CODED is displayed, and you must confirm that you wish to store the copy*	<b>CODED</b> <b>GO</b>
Once the CD is copied and stored, COPY OK appears in the display	<b>COPY OK</b>
<b>To stop copying...</b>	
Press to stop – the entire copy is then deleted	<b>CD MEM</b> <b>STOP</b>

*\*If you choose not to store the copy of a copy protected CD, press STOP to delete the copy.*

*NOTE! If you do not specify a position, the CD is placed on the first available position within the selected group.*

If a CD is already edited (see page 16), it is still copied in full if you select ALL. It is also possible to copy selected tracks only by editing the CD. In editing mode, you hear the first 15 seconds of each track. This leaves you time to decide whether to include or exclude the track. If you choose to leave the function before you have heard all the tracks on the CD, the remaining tracks will be regarded as excluded.

If your music system is set for *Option 0* (see page 29) and you switch on TV while copying, the music system switches to standby when copying is complete. Therefore, to be able to store a copy of a copy protected CD, you must make sure that the music system is activated while copying.

## Copy and store favourite tracks

Press to play the loaded CD	<b>CD</b>
Press to start copying the CD	<b>COPY</b> <b>ALL ?</b>
Press to be able to select which tracks to include	<b>EDIT</b> <b>EDIT ?</b>
Press to start editing the CD	<b>GO</b> <b>EDITING</b>
Press to include the track	▲
Press to exclude the track	▼
Press at any time to store the tracks you have included so far	<b>GO</b>
EDIT OK? appears in the display when the CD has been edited	<b>EDIT OK ?</b>
Press to be able to choose which group to store your CD in	<b>GO</b> <b>COPY TO ?</b>
Press to choose a group	
The first available position in the chosen group is suggested, but you can choose another position	<b>:: 17 ?</b>
Key in the number of the position you want	<b>0 – 9</b>
Press to start copying	<b>GO</b> <b>COPYING</b>
If the CD is copy protected, the display indicates this shortly	<b>CODED CD</b>
When the copying of a coded CD is complete, CODED is displayed, and you must confirm that you wish to store the copy*	<b>CODED</b> <b>GO</b>
Once the edited CD is copied and stored, COPY OK appears in the display	<b>COPY OK</b>

*\*If you choose not to store the copy of a copy protected CD, press STOP to delete the copy.*

Technical specifications, features and the use thereof are subject to change without notice.